


ACCENT: Creating & Customising a New Page

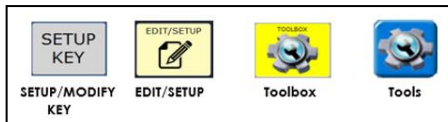

 Click [HERE](#) to download NuVoice PASS

Technical Support:

Tel: +44 (0)1733 370 470 (Option 2)

Email: info@liberator.co.uk

Regional AAC Consultants:

If you wish to speak to your Regional AAC Consultant, please call +44 (0)1733 370 470 (Option 3)

If you are using a mouse to edit, go to the page where you wish to add/edit your word/phrase, **right click** on the button to edit, and select **EDIT**. Then continue programming from where the mouse symbols is displayed. 

Creating and Linking a New Page

This instruction talks you through creating and linking a page assuming you haven't already made the new page you want to link to.

1. Go to the page where you wish to add a new page link.
2. Select **TOOLS > EDIT/SETUP KEY**.
3. Select the button you want to open your new page from.
-  4. Select **ADD MESSAGE OR INSERT TOOL > PAGE LINK**.
5. Decide if you want your page to automatically close after a button is pushed ('close') or remain open ('open').
6. Select **CREATE NEW PAGE**.
7. Type the name of the page and select **OK**.
8. Select **CREATE PAGE FROM TEMPLATE > OK**.
-  9. Select **CHANGE PICTURE > SPELL ICON TO FIND**.
10. Type the name of the picture you want and select **OK**.
11. Choose a picture.
12. Select **CHANGE LABEL**.
13. Type the name for the button label and select **OK**.
14. When finished, select **OK** to finish adding your page link.

Linking an Existing Page

If you have already created a page, follow the instructions below.

1. Go to the page where you wish to add a new page link.
2. Select **TOOLS > EDIT/SETUP KEY**.
3. Select the button you want to open your new page from.
-  4. Select **ADD MESSAGE OR INSERT TOOL > PAGE LINK**.
5. Decide if you want your page to automatically close after a button is pushed ('close') or remain open ('open').
6. Choose the page you wish to link to.
-  7. Select **CHANGE PICTURE > SPELL ICON TO FIND**.
8. Type the name of the picture you want and select **OK**.
9. Choose a picture.
10. Select **CHANGE LABEL**.
11. Type the name for the button label and select **OK**.

12. When finished, select **OK** to finish adding your page link.

Adding a NEW Word

If you want to further edit your page and come out of it, this instruction will tell you how to do that.

1. Go to the page where you wish to add your word.
2. Select **TOOLS > EDIT/SETUP KEY**
3. Select the button where you want to add the new word.
-  4. Select **CHANGE PICTURE > SPELL ICON TO FIND**.
5. Type the name of the picture you want and select **OK**.
6. Choose a picture.
 - a. If you want the spoken message to be different:
 - i. Select **ADD MESSAGE OR INSERT TOOL**.
 - ii. Select **CLEAR**.
 - iii. Type new message (*remember a space at the end*).
 - iv. Select **OK**.
7. Once finished, select **OK** to complete.

Deleting a Word or a Phrase

1. Go to the page where you wish to delete your word.
2. Select **TOOLS > EDIT/SETUP KEY**.
3. Select the button you want to delete.
-  4. Select **CLEAR BUTTON CONTENTS**.
5. Select **OK** to finish.

Deleting a Word or a Phrase Using a Mouse

1. Go to the page where you wish to delete your word.
2. Using the mouse, right-click on the word to delete.
3. Select **CUT**.