


ACCENT: How to use the Off-Screen Button with EyeGaze, Headpointing or Joystick

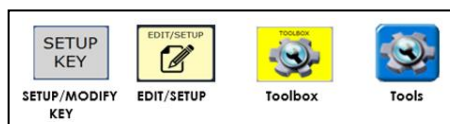

Click [HERE](#) to download NuVoice PASS

Technical Support:


Tel: +44 (0)1733 370 470 (Option 2)

Email: info@liberator.co.uk

Regional AAC Consultants:

If you wish to speak to your Regional AAC Consultant, please call +44 (0)1733 370 470 (Option 3)

Off-Screen Buttons are present at the bottom & right side of the screen, like the off-screen buttons that open on the left side of the screen when the tools button is activated. The off-screen buttons are displayed in the appropriate area when the cursor is moved to the edge of the screen at the left, right, or bottom. This eliminates the need to navigate to the Toolbox for certain menus. A coloured bar on each edge of the display indicates that the **Off-Screen Buttons** are **ON**.

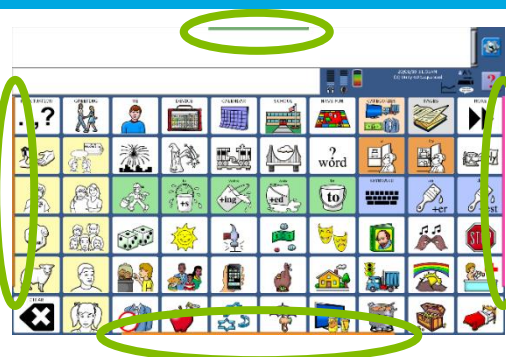


When using NuEye or LOOK, looking at the desired edge of the device will display the off-screen buttons. With NuPoint, directing the cursor to the desired edge will display the off-screen buttons. Touch access users can open the off-screen buttons by programming an **ACTIVATE KEY** tool set to open the desired menu.

Turning the Off-Screen Buttons ON/OFF

The Off-Screen **TOOLS** key and the Off-Screen Pause key (Top-centre of display) are ON as default but may be switched OFF if desired.

1. Access **MUST** be set to NuEye, NuPoint, or Mouse/Joystick.
2. Select **TOOLS > TOOLBOX > ACCESS**.
3. Select **OFF-SCREEN BUTTON SETTINGS**.
4. Press **ON/OFF** to turn the keys on/off.

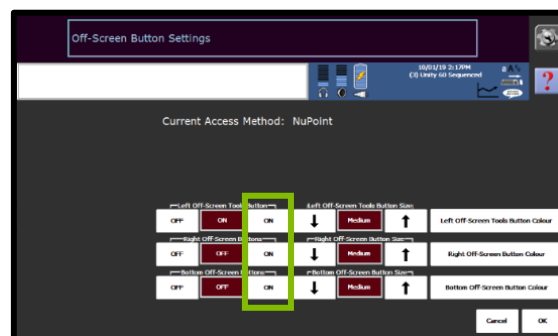


NOTE: Turning the LEFT Off-Screen buttons OFF does not stop these buttons from being displayed when the **TOOLS** button is touched. The **TOOLS** button **will not**

respond if you are using a **NuEye, Look, NuPoint or Joystick** with the cursor/pointer in this location.

Programming the Off-Screen Buttons

The Off-Screen buttons may be programmed via the **VOCABULARY OPTIONS** menu.

1. Select **TOOLS > TOOLBOX > VOCABULARY OPTIONS**.
2. Select **CHANGE OFF-SCREEN BUTTONS**.
3. Select the key within the block that you wish to modify – the key becomes highlighted with a **RED** box.

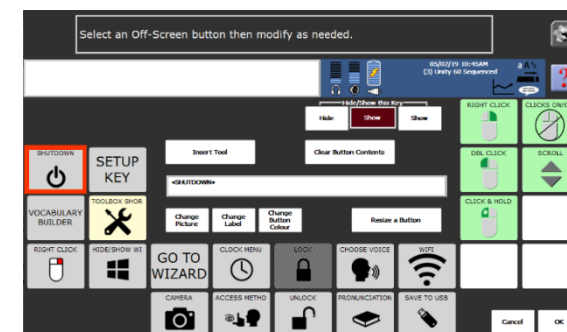

4. Select **INSERT TOOL**.
5. Type in a message if you wish, or press **INSERT TOOL** to insert a function or Menu Item.
6. Change **PICTURE, LABEL, BUTTON COLOUR** or **BUTTON SIZE** if you wish.
7. Press **OK** to save and exit.

NOTE: For the majority of vocabularies, the **LEFT** Off-Screen buttons (softkeys) are currently programmed with:

- SHUTDOWN
- EDIT/SETUP KEY
- VOCABULARY BUILDER
- VOCABULARY BUILDER ON/OFF
- SUPPORT
- HIDE/SHOW WINDOWS
- WORD FINDER