


ACCENT: Remote Control

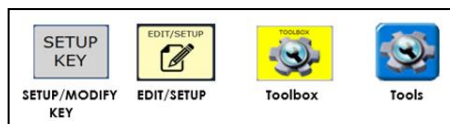

Click [HERE](#) to download NuVoice PASS

Technical Support:

Tel: +44 (0)1733 370 470 (Option 2)

Email: info@liberator.co.uk

Regional AAC Consultants:

If you wish to speak to your Regional AAC Consultant, please call +44 (0)1733 370 470 (Option 3)

The remote-control commands for many popular brands and Service providers such as Samsung, AEG, Apple, Finlux, Freesat, Huawei, Sky, etc. are already pre-stored in the Accent. This therefore saves you having to teach your Accent device any IR commands.

Please note that Accent devices do not accept commands for remote controls that use Radio Frequency (RF).

REMOTE CONTROL TEACHING/RECEIVING TIPS

You may wish to create your own remote-control device or add an additional function to an existing device. The tips below should help to make this process a bit easier.



In the picture above the remote-control learning area is on the right side of the infrared (IR) window (indicated by the red circle). The remote-control learning area is in the same location on each of the Accent products.

Remote control learning will occur best if the transmitter of the remote being learned is directly in line with the remote-control learning area. The remote should be within 4" to 6" of the IR window and pointed directly at the remote-control learning area of the Accent **as shown above**.

Holding the remote at an angle or off to one side may compromise the IR modules ability to receive the signal and could affect how commands are learned.

Improper remote positioning:



REMOTE CONTROL TRANSMITTING/SENDING TIPS



Once the commands are learned, the IR transmitters are strong enough to reliably send the IR signal across a normal size room if the Accent and the receiving device are properly positioned. Below is a representation of the transmitting field. The cone only represents the angle not the distance range.

