


ACCENT: Using a Bluetooth Mobile Phone in easyChat

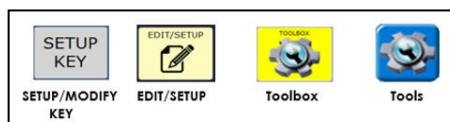

Click [HERE](#) to download NuVoice PASS

Technical Support:

Tel: +44 (0)1733 370 470 (Option 2)

Email: info@liberator.co.uk

Regional AAC Consultants:

If you wish to speak to your Regional AAC Consultant, please call +44 (0)1733 370 470 (Option 3)


This phone feature works exclusively using Bluetooth and supports an extensive range of Android phones, but not all. We have been unable to test every Android phone available, so we suggest you test the phone of your choice before purchasing it. To connect an Android Phone you will need to install the PRC-Salttillo "AeroText App" onto your phone.

DOWNLOAD THE AEROTEXT APP FOR ANDROID

The PRC-Salttillo AeroText app for Android allows you to use your phone for calling and texting. To install the App onto your phone:

1. On the Accent device, select **TOOLS > TOOLBOX**.
2. Select **ADVANCED SETTINGS**.
3. Select **MOBILE PHONE SETUP & HARDWARE TESTING**.
4. Select **PHONE CONFIGURATION**.
5. In the **USE PHONE FOR** field, select **CALLING AND TEXTING**.
6. Using your mobile phone:
 - a. Scan the QR code, or
 - b. Go to the website shown.
7. Download the AeroText App.
8. Select the downloaded file and tap to install.

** Your phone may ask whether you wish to install a file from unknown sources; select the option to "allow from this source once" when prompted.*

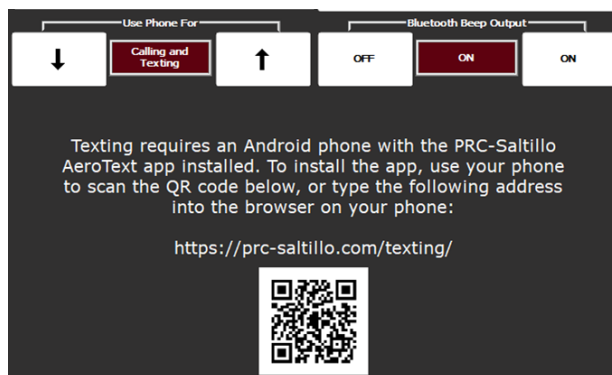

PAIRING YOUR PHONE TO AN ACCENT

1. On the mobile phone, go to the **AeroText App**.
2. Click on **AeroText is not your SMS app** to set it as default; select **CHANGE** if prompted.
3. Click **NO BLUETOOTH CONNECTION** at the top.
4. Click **YES/ALLOW**, to ensure your phone is visible.
5. On the Accent device, within the **PHONE CONFIGURATION** Menu, select **PAIR TO PHONE** an orange box will appear on the device advising "Please Wait".
6. On the mobile phone, wait for the pairing dialogue to appear, then select **YES/OK** to pair.
7. Enter the pass code "0000" if prompted and select **OK**.

8. The Bluetooth Status Box will display "Phone Name", Connected, Calling Supported, Text Messaging Supported.



Once **paired**, the **PHONE CONNECTION** icon appears in the **STATUS DISPLAY AREA**. The icon goes **green** and displays the mobile phone's **signal strength** and **battery charge**.




9. Select **OK** four times to exit and get back to home screen.

** If the phone has been previously paired, all you have to do is change the "Use Phone For" setting to Calling and Texting.*

LOAD OR UPDATE PHONE PAGES

When the "USE PHONE FOR" setting is first moved to Calling and Texting and phone pages have never been loaded you will receive this message:

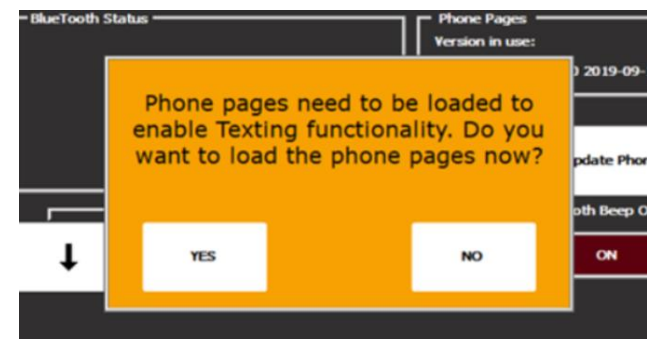

1. Accept and load these pages.
2. For those starting with 'new' versions of easyChat v7.01 (or above) vocabularies, these pages automatically update and appear within your vocabulary file, e.g.


within easyChat, the pages are present within the **APPS** page – see below:



To add the phone pages to your customised vocabulary (i.e. vocabulary in use prior to the release of NuVoice v2.15), please contact Customer Support on 01733 370 470 (Option 2).

SENDING TEXT MESSAGES TO EXISTING CONTACTS

1. Go to your **CONTACTS** page.
2. Select the person you wish to text.
3. Select **TEXT**.
4. Type in the **TEXT** Message by:
 - a. using the displayed keyboard and then select **SEND TEXT**, or
 - b. selecting **TYPE WITH EASYCHAT** to use your **ICONS** to type, and then select **APPS** then **SEND TEXT**, or
 - c. going to the **QUICK MESSAGE** page, select a pre-set message and then select **SEND TEXT**.

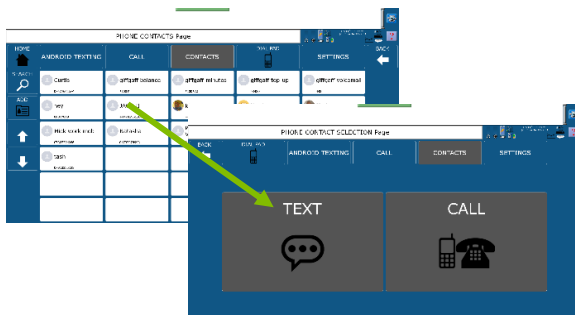


READING TEXT MESSAGES

Upon receipt of a text message, a **white envelope** icon appears in the **STATUS DISPLAY AREA**.

1. Go to the **ANDROID TEXTING** page.
2. A list of text messages from your phone will be displayed, with the most recent appearing first.
3. The **CONVERSATIONS** column will display recent TEXT contacts.

4. The **MESSAGES** column will display the most recent message thread from that **Contact**; The message may be read from here.
5. You also have the option of **READING, SPEAKING, COPYING, VIEWING** (enlarges the message or picture) or **REPLYING** to the message.

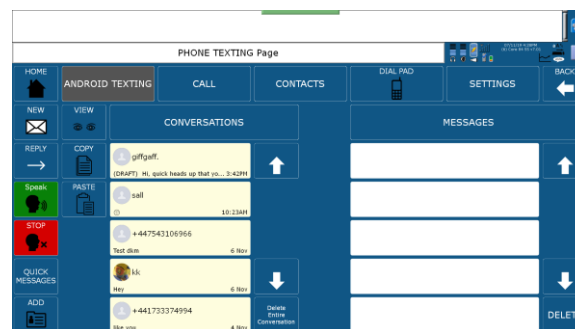

MAKING A VOICE CALL

1. To make a voice call:
 - a. Go to the **CALL** page and select the Contact; the number automatically dials.
 - b. Go to the **CONTACTS** page and select a Contact, select **CALL**; the number automatically dials.
 - c. From either the **CALL** or the **CONTACTS** page, select **DIAL PAD**; Dial the number and select **SEND**.
2. You may navigate to your **HOME** screen, a **SPELLING** page or a **PRE-SET MESSAGES** page to converse.
3. Select **END CALL** to end the call.



ANSWERING A CALL FROM THE DIAL PAD


1. Upon receipt of a call, the **CALL STATUS** icon appears in the **STATUS DISPLAY AREA**.
2. Go to the **APPS** or **CALLS** page; select the **ANSWER** button to answer the call.

ADDING A NEW CONTACT

1. Go to the **CONTACTS** page.
2. Select **ADD**.
3. Enter the number for the contact and select **OK**.
4. Type the name of the **CONTACT** and select **OK**.

PHONE SETTINGS

The **PHONE SETTINGS** pages may be accessed from the **TEXT**, **CALL** or **CONTACTS** page. See below:

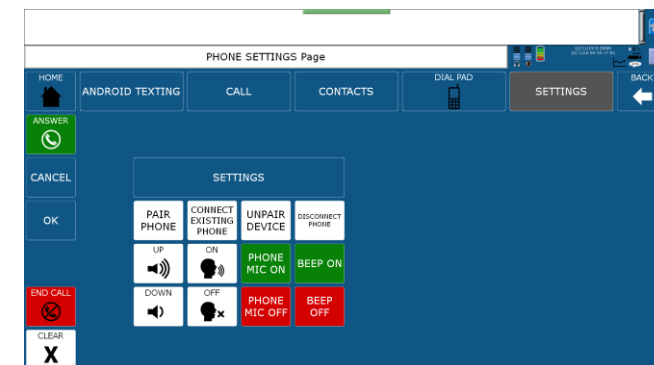

- **PAIR PHONE** – pair your phone from here.
- **CONNECT EXISTING PHONE** – connect to an already paired phone.
- **UNPAIR DEVICE** –unpair a paired Bluetooth device.
- **DISCONNECT PHONE** – disconnect your phone but remain paired.
- **VOLUME UP/DOWN** – alter the incoming call volume.
- **SPEECH ON/OFF** – mute or unmute yourself during a call.
- **PHONE MIC ON/OFF** – allows an external speaker as well as you (speaking with your Accent), to be heard.
- **BEEP ON/OFF** – turn Bluetooth beep output ON or OFF.